



Mounting instructions exhaust systems

Model: Honda® CMX1100 Rebel - Plant Breaker

! The assembly must be carried out by qualified personnel !


1. Loosen the original exhaust clamp between manifold and silencer
2. Remove the screw on the pillion footrest that holds the original silencer
3. Pull the original silencer off the manifold
4. If necessary, remove the original graphite gasket from the manifold



5. Insert the supplied graphite gasket into the Miller silencer
6. Carefully slide the clamp onto the Miller silencer (gap to the end of the pipe approx. 2 - 3 mm).
7. Fit the Miller silencer onto the original manifold



8. The bracket of the Miller silencer is attached to the pillion footrest in the same way as the original silencer.
9. Insert the footrest through the holder on the motorcycle
10. Fix the Miller silencer as shown in the illustration.

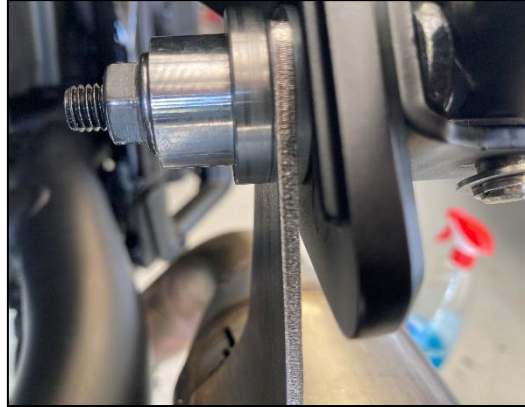

11. Align the silencer and tighten all screws.

Check all screw connections for tightness. Before commissioning, clean the entire exhaust system clean and free of grease with window cleaner and microfibre cloth.

Scope of delivery:

- 1x silencer
- 1x clamp
- 1x graphite gasket
- 3x spacer (aluminium)
- 1 x service card

Please note!

Keep a safe distance from all vehicle components, depending on their function. Pay particular attention to the brake system, cables, oil and fuel lines. If necessary, a corresponding distance must be ensured by re-routing the aforementioned components.

Please check all screw connections regularly for tightness.

Permissible torques: M5 / 5.3Nm | M6 / 9.1Nm | M8 / 21.8Nm

Please make absolutely sure that you do not come into contact with the exhaust system when the vehicle is stationary or in motion, as the heat generated can lead to burns.

Kind regards

MILLER Custombike GmbH