



Mounting instructions for exhaust systems / K8-

Model: SUZUKI ® M1800 / VZR1800 2-2 Slip-On system El Capone

Since the assembly of exhaust systems requires technical expertise,
it must be carried out by qualified personnel.

Please read the installation instructions completely before installation.

***ATTENTION:** The lower muffler connection to the manifold must be cut with an angle grinder or saw.

- a. Disassemble the upper silencer.
- b. *Disconnect the lower muffler from the header. (See pictures)
- c. Install the lower muffler and mount it on the original bracket.
- d. Install the upper muffler and attach it to the bracket provided with the lower muffler.
- e. Align the mufflers and tighten the brackets / clamps securely.
- g. Before commissioning, clean the complete exhaust system clean and free of grease.

Please note!


A large safety distance must be kept from all vehicle components, depending on their function. Pay particular attention to the brake system, cables, oil and fuel line. If necessary, a corresponding distance must be ensured by re-routing the aforementioned components.

Please check all screw connections regularly for tightness.

Please make absolutely sure that you do not come into contact with the exhaust system under any circumstances when stationary or driving, as the heat generated can cause burns.

Best regards

Miller Custombike GmbH

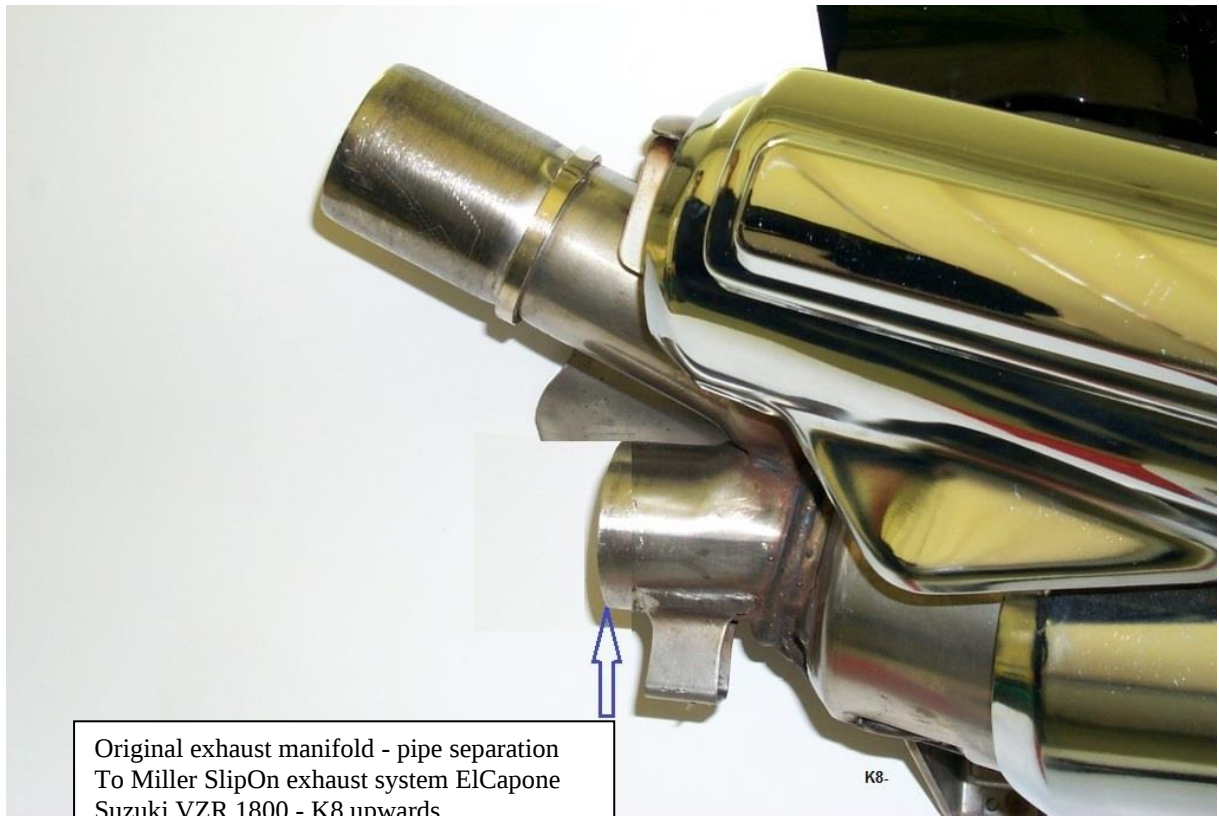

Original exhaust manifold - pipe separation
To Miller SlipOn exhaust system ElCapone
Suzuki VZR 1800 - K8 upwards