




## 12-0907 7mm Master Cylinder Spacer Installation Instructions

**WARNING** Installation and use of some Woodcraft Technologies, Inc. products will change the response of the motorcycle to rider control inputs. Failure of the rider to adapt to these changes may cause loss of control, and serious injury or death. Improper installation, and/or failure to comply with all warnings and instructions may cause loss of control and serious injury or death. **DO NOT INSTALL OR USE ANY WOODCRAFT TECHNOLOGIES, INC. PRODUCTS IF YOU ARE UNABLE TO DO SO IN COMPLIANCE WITH ALL INSTRUCTIONS AND WARNINGS. SEEK THE ASSISTANCE OF AN EXPERIENCED TECHNICIAN.**

- 1) Remove the bolts and the master cylinder clamp that holds the master cylinder to the handlebar.
- 2) Place the Woodcraft 7mm spacer between the handlebar and the master cylinder on the front side of the handlebar.
- 3) Secure the OEM master cylinder clamp to the master cylinder using the supplied M6x30mm bolts. Note: some motorcycles may require shorter hardware due to the design of the master cylinder. Be sure that these bolts do not bottom out in the master cylinder before the assembly is tight.
- 4) Adjust the lever so that it is a comfortable reach. Check that no part of the assembly makes contact with any part of the motorcycle throughout the complete steering range. Tighten the 6x30mm bolts.

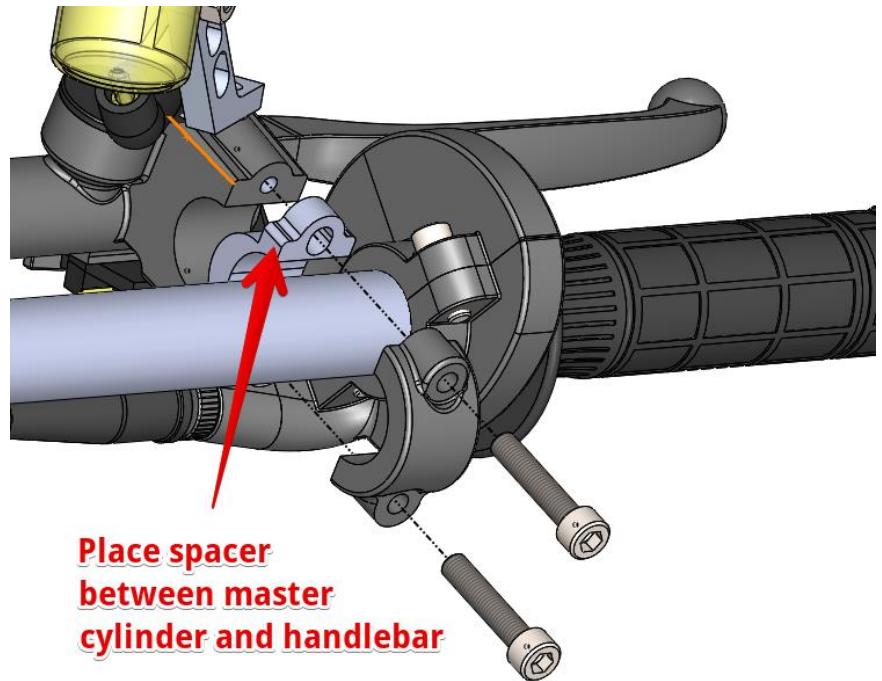

**WARNING - VERY IMPORTANT** : Ensure that the cables, hoses and all control parts do not contact any part of the motorcycle and that you have full ability to manipulate the controls throughout the entire range of steering. Also, be sure that the throttle returns freely after being fully opened throughout the entire range of steering. **FAILURE TO HEED THESE WARNINGS MAY CAUSE LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH. DO NOT OPERATE THE MOTORCYCLE IF THERE ARE ANY INTERFERENCE ISSUES WITH EITHER THE MOTORCYCLE PARTS OR YOUR BODY, OR WITH A THROTTLE THAT DOES NOT RETURN FREELY.**