



EVOTECH®
P E R F O R M A N C E


Installation Instructions

YAMAHA MT-07 2014 ONWARDS CRASH PROTECTION

Product Reference - 11696


Kit Contents

- A** 2 x Bobbin Heads
- B** 2 x Bobbin Spacers
- C** 2 x M12 - 110 x 1.25 Hex Bolts
- D** 2 x M12 Washers

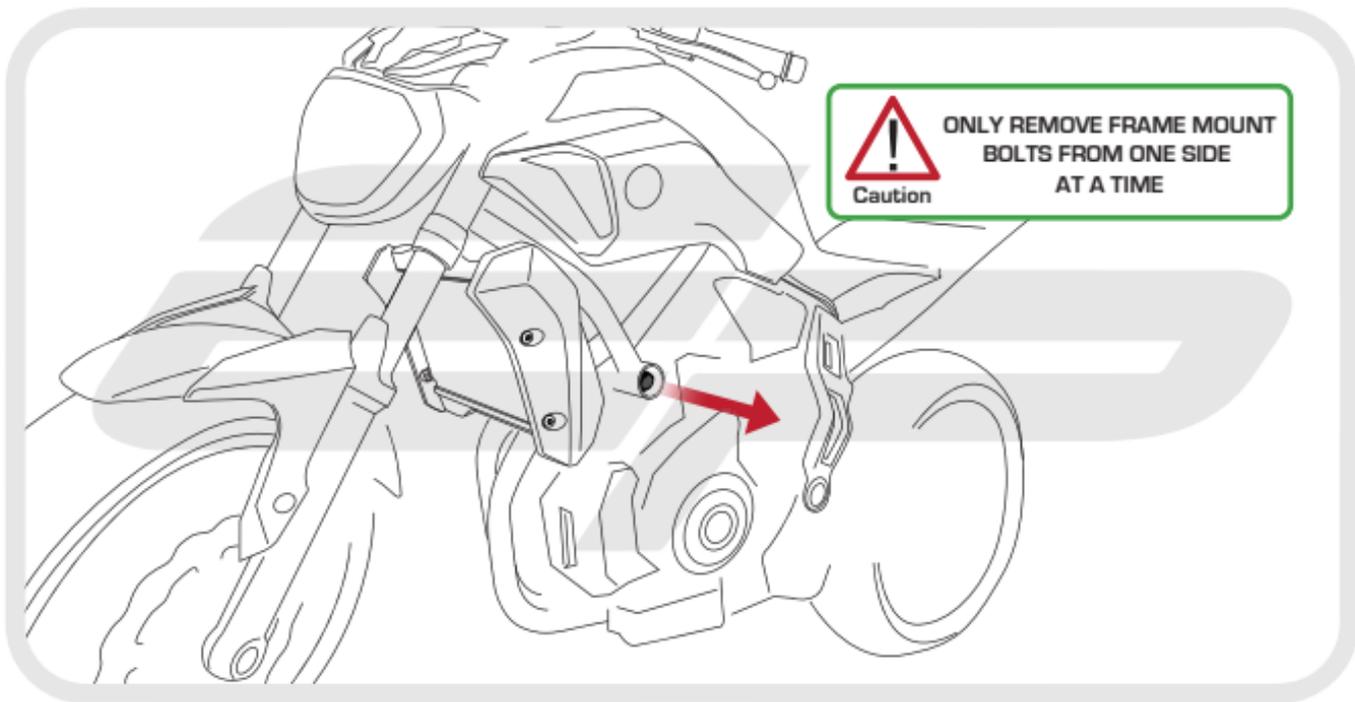


Caution

ONLY REMOVE FRAME MOUNT
BOLTS FROM ONE SIDE
AT A TIME

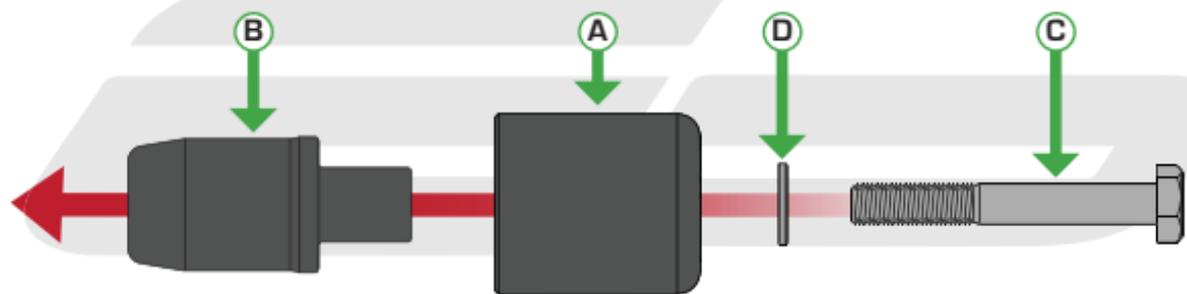


EVOTECH[®]
P E R F O R M A N C E

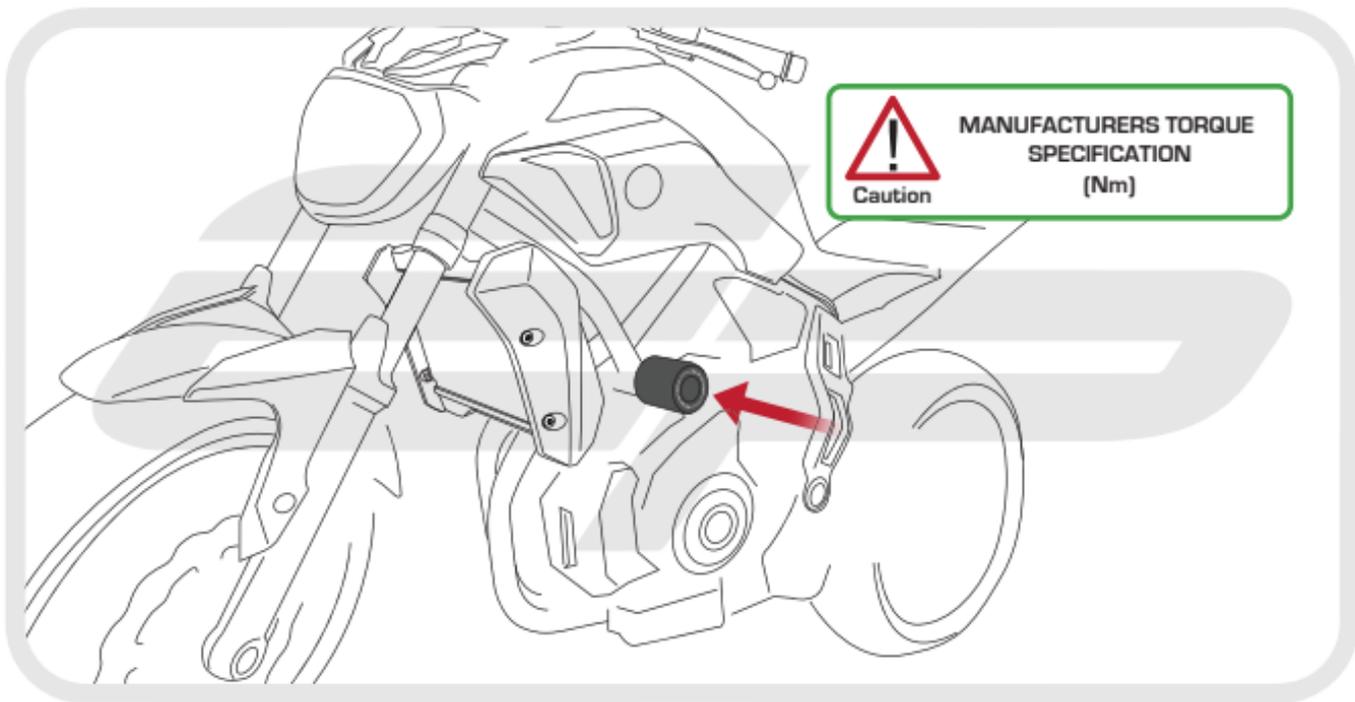




Caution


ONLY REMOVE FRAME MOUNT
BOLTS FROM ONE SIDE
AT A TIME

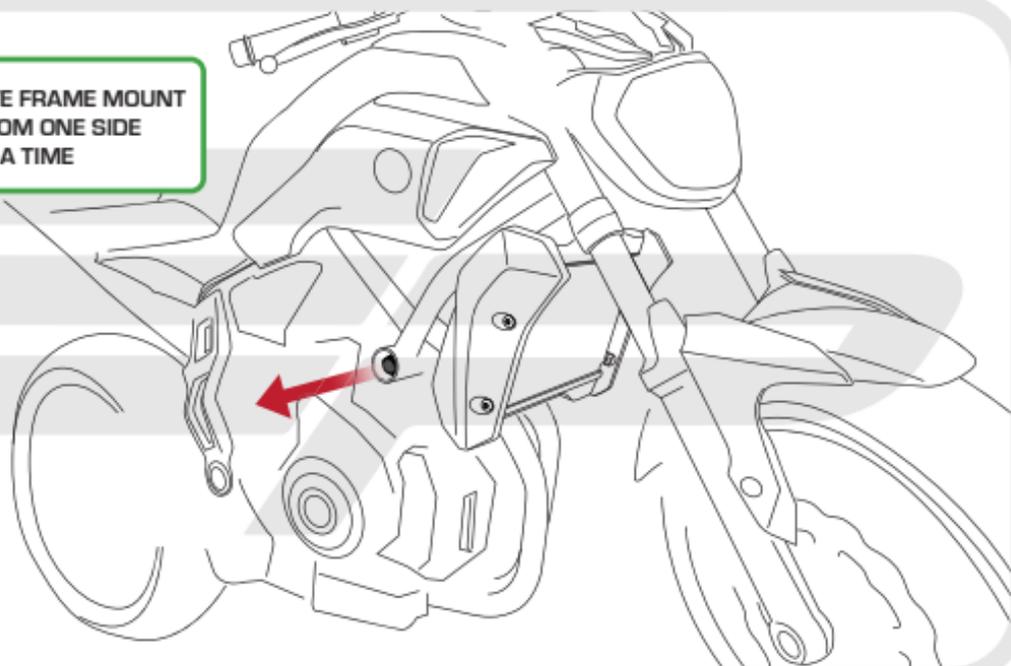

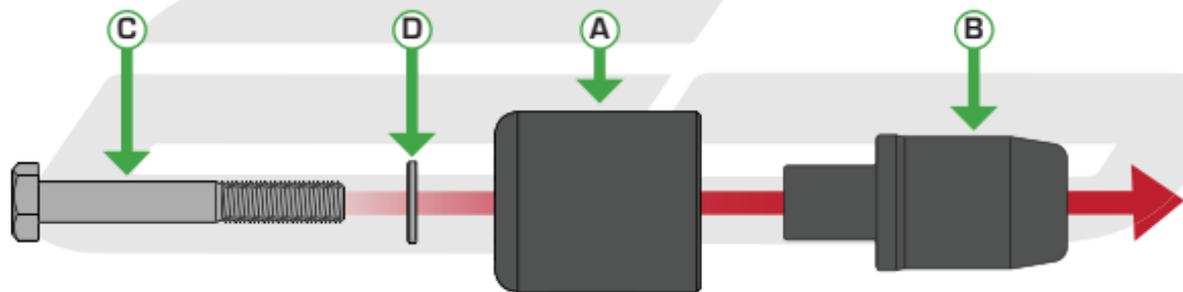



 **MANUFACTURERS TORQUE SPECIFICATION (Nm)**
Caution

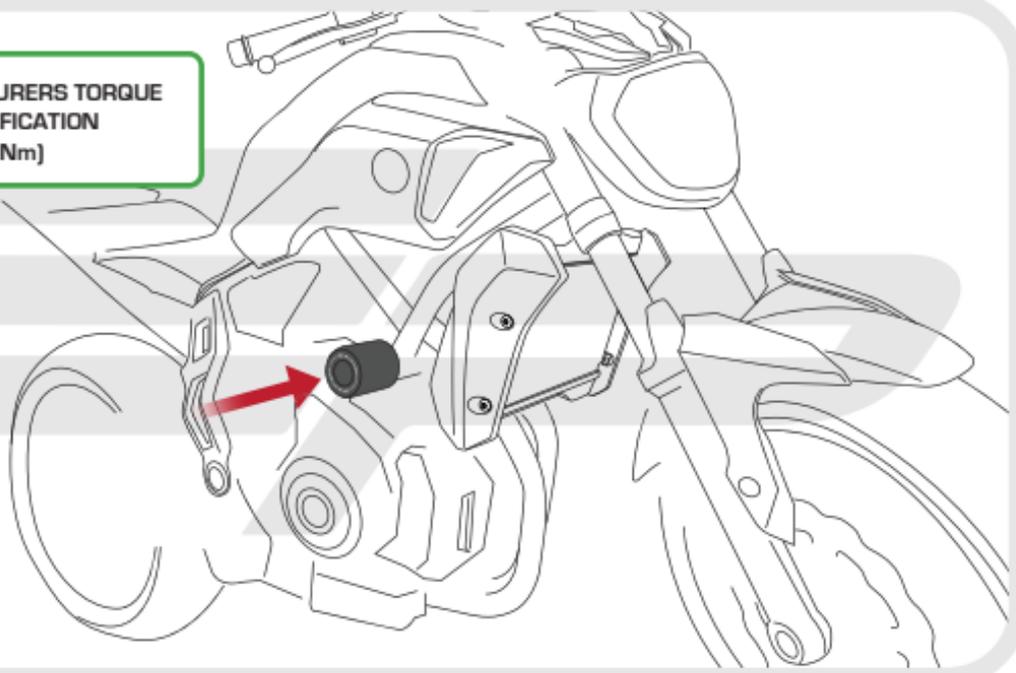



Maintenance

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com